

8th
EDITION

Chemical Resistance Guide

Permeation & Degradation Data

Ansell



Fisher Safety

Permeation/Degradation Resistance Guide for Ansell Chemical Resistant Gloves

Introduction to the 8th Edition

When reviewing the following recommendations, remember that tests are conducted under laboratory conditions, and that actual workplace conditions usually dictate a *combination* of performance capabilities. A product's resistance to cuts, punctures, and abrasion must also be taken into account as a critical usage factor. A glove with excellent permeation resistance may not be adequate if it tears or punctures easily. Always factor in the physical performance requirements of the job or application when selecting a chemical-resistant glove.

Ansell's ASTM standard permeation and

degradation tests are presented on the following pages as an aid in determining the general suitability of various products for use with specific chemicals. Because the conditions of ultimate use are beyond our control, and because we cannot run permeation tests in all possible work environments and across all combinations of chemicals and solutions, these recommendations are advisory only. THE SUITABILITY OF THE PRODUCT FOR A SPECIFIC JOB MUST BE DETERMINED BY TESTING BY THE PURCHASER.

Definition of Key Terms

Permeation is a process by which a chemical can pass through a protective film without going through pinholes, pores, or other visible openings. Individual molecules of the chemical

enter the film, and "squirm" through by passing between the molecules of the glove compound or film. In many cases the permeated material may appear unchanged to the human eye.

Chemical permeation can be described in simple terms by comparing it to what happens to the air in a balloon after several hours. Although there are no holes or defects, and the balloon is tightly sealed, the air gradually passes through (permeates) its walls and escapes. This simple example uses gas permeation, but the principle is the same with liquids or chemicals.

Permeation data are presented in two values: **Breakthrough** time and **Rate**. Breakthrough times (min.) are the times observed from the start of

the test to first detection of the chemical on the other side of the sample (for test methodology, see the outside back cover of this guide). These times represent how long a glove can be expected to provide effective permeation resistance when totally immersed in the test chemical.

Permeation rates are the highest *flow rates* recorded for the permeating chemicals through the glove samples during a six-hour or eight-hour test. These qualitative ratings are comparisons of permeation rates to each other.

Degradation is a reduction in one or more physical properties of a glove material due to contact with a chemical. Certain glove materials may become hard, stiff, or brittle, or they may grow softer, weaker, and swell to several times their original

size. If a chemical has a significant impact on the physical properties of a glove material, its permeation resistance is quickly impaired. For this reason, glove/chemical combinations rated "Poor" are usually not tested for permeation resistance, and combinations rated "Not Recommended" are never tested for permeation resistance. Please note, however, that permeation and degradation do not always correlate.

The overall Degradation **Rating** for each chemical is explained in "How To Read The Charts."

How to Read the Charts

Three categories of data are represented for each Ansell product and corresponding chemical: 1) overall degradation resistance rating; 2) permeation breakthrough time, and 3) permeation rate.

Standards for Color-Coding

A glove-chemical combination receives **GREEN** ■ if either set of the following conditions is met:

- The Degradation Rating is Excellent or Good
- The Permeation Breakthrough Time is 30 minutes or greater
- The Permeation Rate is Excellent, Very Good, or Good

OR

- The Permeation Rating is not specified
- The Permeation Breakthrough Time is 240 minutes or greater
- The Degradation Rating is Excellent, or Good

A glove-chemical combination receives **RED** ■ if either set of the following conditions is met:

- The Degradation Rating is Poor or Not Recommended

OR

- The Degradation Rating is Degrades with Delamination (DD)
- The Permeation Breakthrough Time is less than 20 minutes

All other glove-chemical combinations receive **YELLOW** ■. In other words, any glove-chemical combination not meeting either set of conditions required for Green, and not having a Red degradation rating of either Poor or Not Recommended, receives a **YELLOW** ■ rating.

Why is a product with a shorter breakthrough time sometimes given a better rating than one with a longer breakthrough time?

One glove has a breakthrough time of just 4 minutes. It is rated "very good," while another with a breakthrough time of 30 minutes is rated only "fair." Why? The reason is simple: in some cases the *rate* is more significant than the *time*.

Imagine connecting two hoses of the same length but different diameters to a faucet using a "Y" connector. When you turn on the water, what happens? Water goes through the smaller hose first because there is less space inside that needs to be filled. But when the water finally gets through the

larger hose it really gushes out. In only a few minutes, the larger hose will discharge much more water than the smaller one, even though the smaller one started first.

The situation is similar with gloves. A combination of a short breakthrough time and a low permeation rate may expose a glove wearer to less chemical than a combination of a longer breakthrough time and a much higher breakthrough rate, if the glove is worn long enough.

Key to Permeation Rate

	Drops/hr Through a Glove (eyedropper-size drops)
E – Excellent; permeation rate of less than 0.9 µg/cm ² /min.	0 to 1/2 drop
VG – Very Good; permeation rate of less than 9 µg/cm ² /min.	1 to 5 drops
G – Good; permeation rate of less than 90 µg/cm ² /min.	6 to 50 drops
F – Fair; permeation rate of less than 900 µg/cm ² /min.	51 to 500 drops
P – Poor; permeation rate of less than 9000 µg/cm ² /min.	501 to 5000 drops
NR – Not Recommended; permeation rate greater than 9000 µg/cm ² /min.	5001 drops up

Key to Permeation Breakthrough

>Greater than (time) <Less than (time)

Key to Degradation Ratings

- E – Excellent; fluid has very little degrading effect.
- G – Good; fluid has minor degrading effect.
- F – Fair; fluid has moderate degrading effect.
- P – Poor; fluid has pronounced degrading effect.
- DD – Degrades the outer layer and delaminates it.
- NR – Not Recommended; fluid has severe degrading effect.


DD is a new degradation rating that applies to Viton/butyl gloves versus certain chemicals. It means "Degrades and Delaminates". If a chemical causes severe swelling of Viton but has little effect on butyl, the adhesion between these two rubber layers can be overcome under the relatively severe continuous liquid contact that is part of an ASTM or CEN standard permeation test. The end result of this stress is Viton "blisters" or even complete layer separation. The damage is likely to be permanent.

In cases such as these the butyl layer is providing most of the protection. But if the end use involves only the possibility of splash or intermittent contact so that the Viton layer never absorbs enough chemical to swell and delaminate, Viton/butyl gloves might still be the best choice. The ultimate decision on when to use plain butyl and when to use Viton/butyl will depend on the overall chemical mix in your facility and on the degree of exposure to each.

Specific Gloves Used for Testing

	Degradation and Permeation
Laminated LCP™ Film	Barrier® 2-100 (2.5 mil/0.06 mm)
Nitrile	Sol-Vex® 37-165 (22 mil/0.56 mm)
Neoprene Unsupported	29-865 (18 mil/0.46 mm)
Polyvinyl Alcohol Supported	PVA™
Polyvinyl Chloride Supported	Snorkel®
Natural Rubber Latex	Canners 343 (20 mil/0.51 mm)
Neoprene/Latex Blend	Chemi-Pro® 224 (27 mil/0.68 mm)
Butyl Unsupported	ChemTek® 38-320 (20 mil/0.51 mm)
Viton/Butyl Unsupported	ChemTek® 38-612 (12 mil/0.30 mm)

Methodology

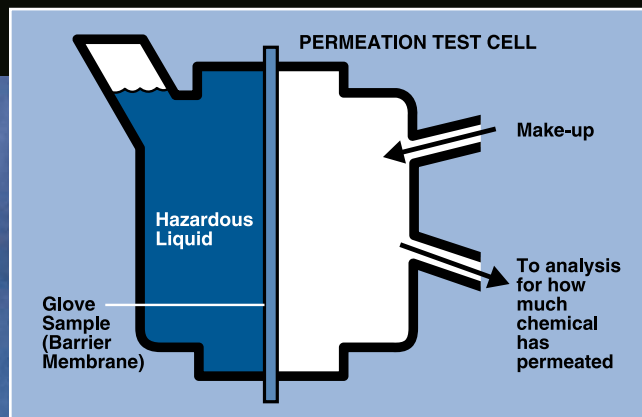

Permeation Testing

Ansell conducts permeation testing in accordance with ASTM Method F 739 standards. A specimen is cut from the glove and clamped into a test cell as a barrier membrane (see illustration). The “exterior” side of the specimen is exposed to a hazardous chemical. At timed intervals, the unexposed

“interior” side of the test cell is checked for the presence of the permeated chemical and the extent to which it may have permeated the glove material.

This standard allows a variety of options in analytical technique and collection media. At Ansell, dry nitrogen is the most common medium and gas chromatography with FID detection is the most common analytical technique. Our Research Department also uses liquids such as distilled water and hexane as collecting media, and techniques such as conductivity, colorimetry, and liquid chromatography for analysis of the collecting liquid.

Degradation Testing

Patches of the test material are cut from the product. These patches are weighed and measured, and then completely immersed in the test chemical for 30 minutes. The percentage of change in size is determined, and the patches are then dried to calculate the percentage of weight change. Observed physical changes are also reported. Ratings are based on the combined data.



For customer service, call 1-800-772-6733.
To fax and order, use 1-800-772-7702.
To order online: www.fishersafety.com

Ansell

Ansell Healthcare

www.ansellasiapacific.com

JAPAN- 2-15-13 Hongo, Bunkyo-ku, Tokyo 113-0033; Tel. +81 3 5805 3741 Fax. +81 3 5800 6171

AUSTRALIA- Level 3, 678 Victoria St.; Richmond, Vic, 3121; Tel. +61 3 9270 7270 Fax. +61 3 9270 7300

www.anselleurope.com

BELGIUM- Blvd. International, 55; 1070 Brussels; Tel. +32 2 528 74 00 Fax. +32 2 528 74 01

www.ansellcanada.ca

CANADA- 105 Lauder St.; Cowansville Quebec J2K 2K8; Tel. +800 363 8340 Fax. +888 267 3551

www.ansellpro.com

BRAZIL- Av. dos Estados 4530/4576; Santo Andre-SP-CEP 09220-570; CNPJ 03.496.778/0001-21;
Tel. +55 19 3129 0031 Fax. +55 19 3129 0032

MEXICO- Sierra de Zimapán 4-69; Col. Villas del Sol, C.P. 76047; Querétaro, Qro.;
Tel. +52 442 248 1544 Fax. +52 442 248 3133

UNITED STATES- 200 Schulz Dr.; Red Bank, NJ 07701; Tel. 800 800 0444 Fax. 800 800 0445

8th EDITION

Permeation/Degradation Resistance Guide for Ansell Gloves

The first square in each column for each glove type is color coded to provide an overall rating for both Degradation and Permeation. The letter in each colored square is for Degradation alone.

GREEN: The glove is very well suited for application with that chemical.

YELLOW: The glove is suitable for that application under careful control of its use.

RED: Avoid use of the glove with this chemical.

SPECIAL NOTE: The chemicals in this guide highlighted in BLUE are experimental carcinogens, according to the ninth edition of Sax' *Dangerous Properties of Industrial Materials*. Chemicals highlighted in GRAY are listed as suspected carcinogens, experimental carcinogens at extremely high dosages, and other materials which pose a lesser risk of cancer.



CHEMICAL	LAMINATE FILM BARRIER™			NITRILE SOL-VEX®			UNSUPPORTED NEOPRENE 29-SERIES			SUPPORTED POLYVINYL ALCOHOL PVA™			POLYVINYL CHLORIDE (Vinyl) SNORKEL®			NATURAL RUBBER *CANNERS AND HANDLERS™			NEOPRENE/NATURAL RUBBER BLEND *CHEMI-PRO®			BUTYL UNSUPPORTED CHEMTEK™ BUTYL			VITON/BUTYL UNSUPPORTED CHEMTEK™ VITON/BUTYL		
	Style: 2-100 ASPEN: 902212 FISHER NUMBER: 19-048-754			Style: 37-165 ASPEN: 117209 FISHER NUMBER: 11-391-138C			Style: 29-865 ASPEN: 116313 FISHER NUMBER: 11-391-130C			Style: 15-554 ASPEN: 214306 FISHER NUMBER: 19-018-120			Style: 4-412 ASPEN: 211134 FISHER NUMBER: 19-014-903			Style: 343 ASPEN: 193435 FISHER NUMBER: 19-019-602			Style: 224 ASPEN: 192245 FISHER NUMBER: 19-014-486			Style: 38-320 ASPEN: 189026 FISHER NUMBER: 19-161-435			Style: 38-612 ASPEN: 189033 FISHER NUMBER: 19-161-442		
	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate	Degradation Rating	Permeation: Breakthrough	Permeation: Rate
1. Acetaldehyde	■	380	E	P	—	—	E	10	F	NR	—	—	NR	—	—	E	13	F	E	10	F	—	—	—	—	—	
2. Acetic Acid, Glacial, 99.7%	■	150	—	G	158	—	E	390	—	NR	—	—	F	45	G	E	110	—	E	263	—	E	>480	E	DD	>480	—
3. Acetone	▲	>480	E	NR	—	—	G	10	F	P	143	G	NR	<5	—	E	10	F	G	12	G	E	>480	E	DD	93	VG
4. Acetonitrile	▲	>480	E	F	30	F	E	20	VG	■	150	G	NR	—	—	E	4	VG	E	13	VG	E	>480	E	DD	70	E
5. Acrylic Acid	—	—	—	G	120	—	E	395	—	NR	—	—	NR	—	—	E	80	—	E	67	—	—	—	—	—	—	—
6. Acrylonitrile	▲	>480	E	—	—	—	—	—	—	▲	>480	—	—	—	—	E	5	F	—	—	—	E	>480	—	E	>480	—
7. Allyl Alcohol	▲	>480	E	F	140	F	E	140	VG	P	—	—	P	60	G	E	10	VG	E	20	VG	E	>480	—	E	>180	—
8. Ammonia Gas	■	19	E	▲	>480	E	▲	>480	—	—	—	—	—	—	—	—	—	—	■	27	E	—	—	—	—	—	—
9. Ammonium Fluoride, 40%	▲	>480	E	E	>360	—	E	>480	—	NR	—	—	E	>360	—	E	>360	—	E	>360	—	—	—	—	—	—	—
10. Ammonium Hydroxide, Conc. (28-30% Ammonia)	E	30	—	E	>360	—	E	250	—	NR	—	—	E	240	—	E	90	—	E	247	—	E	>480	—	E	>480	—
11. n-Amyl Acetate	▲	470	E	E	198	G	NR	—	—	G	>360	E	P	—	—	NR	—	—	P	—	—	E	128	G	F	<10	F
12. Amyl Alcohol	▲	>480	E	E	>480	E	E	348	VG	G	180	G	G	12	E	E	25	VG	E	52	VG	E	>480	E	E	>480	E
13. Aniline	▲	>480	E	NR	—	—	E	145	F	F	>360	E	F	62	G	E	25	VG	E	82	G	E	>480	E	E	>480	E
14. Aqua Regia	—	—	—	F	>360	—	G	>480	—	NR	—	—	G	120	—	NR	—	—	G	193	—	E	>480	—	E	>480	—
15. Benzaldehyde	▲	>480	E	NR	—	—	NR	—	—	G	>360	E	NR	—	—	G	10	VG	G	27	F	E	>480	E	E	100	E
16. Benzene (Benzol)	▲	>480	E	P	—	—	NR	—	—	E	>360	E	NR	—	—	NR	—	—	NR	—	—	E	20	F	E	253	VG
17. Benzotrifluoride	▲	>480	E	E	>480	E	NR	—	—	—	—	—	G	—	—	NR	—	—	NR	—	—	—	—	—	—	—	—
18. Benzotrifluoride	▲	>480	E	E	170	G	—	—	—	—	—	—	G	<10	F	P	50	G	P	—	—	—	—	—	—	—	—
19. Bromine Water	—	—	—	E	>480	E	E	>480	E	NR	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
20. 1-Bromopropane (Propyl Bromide)	▲	>480	E	▼	23	F	▼	<10	P	▲	>480	E	▼	<10	F	▼	<10	P	▼	<10	P	▼	10	P	■	182	VG
21. 2-Bromopropionic Acid	▲	>480	—	F	120	—	E	460	—	—	—	—	G	180	—	E	190	—	G	190	—	—	—	—	—	—	—
22. n-Butyl Acetate	▲	>480	E	F	75	F	NR	—	—	G	>360	E	NR	—	—	NR	—	—	P	—	—	E	80	G	DD	<10	F
23. n-Butyl Alcohol	▲	>480	E	E	>360	E	E	270	E	F	75	G	G	180	VG	E	35	VG	E	75	VG	E	>480	E	E	>480	E
24. Butyl Carbitol	—	—	—	E	>323	E	G	188	F	E	>480	E	E	397	VG	E	44	G	E	148	G	—	—	—	—	—	—
25. Butyl Cellosolve	▲	>480	E	E	470	VG	E	180	G	■	120	G	P	60	G	E	45	G	E	48	G	E	>480	—	E	>480	—
26. gamma-Butyrolactone	▲	>480	E	NR	—	—	E	245	G	E	120	VG	NR	—	—	E	60	G	E	104	F	E	>480	E	E	>480	E
27. Carbon Disulfide	▲	>480	E	G	30	F	NR	—	—	E	>360	E	NR	<5	—	NR	—	—	NR	—	—	▼	7	G	■	138	E
28. Carbon Tetrachloride	—	—	—	G	150	G	NR	—	—	E	>360	E	F	25	F	NR	—	—	NR	—	—	F	53	P	—	—	—
29. Cellosolve® (Ethyl Glycol Ether, 2-Ethoxyethanol)	E	>480	E	G	293	G	E	128	G	■	75	G	P	38	G	E	25	VG	E	25	VG	E	>480	E	E	465	E
30. Cellosolve Acetate® (2-Ethoxyethyl Acetate, EGEEA)	▲	>480	E	F	90	G	G	40	F	■	>360	E	NR	—	—	E	10	G	E	23	G	E	>480	E	DD	105	VG

